

Premium Sills Installation Instructions

Make sure you read and understand these instructions before beginning your installation.

Tools and Materials

- Tape measure Small square
- Saber saw or small circular saw
- Polyurethane construction adhesive
- Weatherproof paintable caulk

Always wear safety eye wear when operating power tools.



1 Measure and mark the center of the window.



2 Measure and mark the center on the back of the sill.




3 Align the center of the sill with the center of the window.




4 Mark the left and right jambs.



5 Insert sill into the window opening at an angle (as shown). Make sure the back of the sill is butt up against the window frame. Mark the depth of the window opening on the sill.

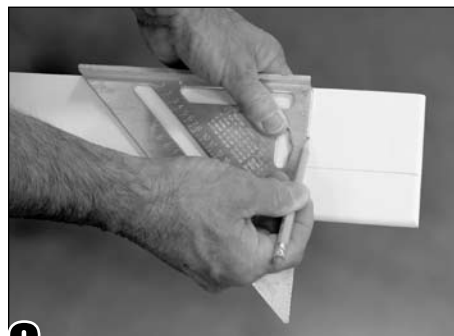


6 Extend the width and depth markings on both ends of the sill.

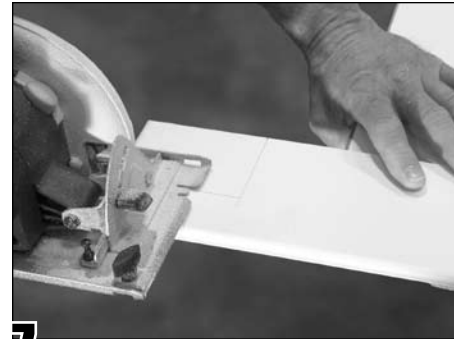

7 Cut on the extended lines. Do not cut past the intersections.



8 On the sill area, apply 1-inch balls of polyurethane construction adhesive three inches from each end and six inches apart.

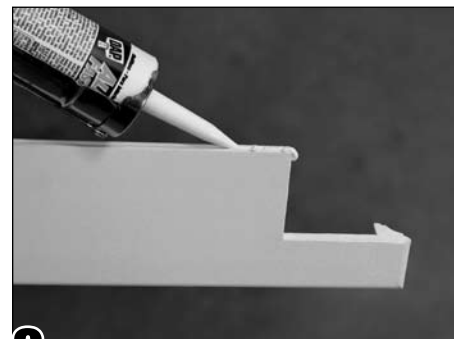

9 Apply a continuous bead of sealant to the back of the sill.



10 Insert the sill at a slight angle and making contact with the window then pivot the sill down in place.



11 Finish off the installation by applying a bead of caulk between the sill and the drywall. Smooth the caulk with a wet finger.

Additional instructions for installing across multiple windows and for installing in openings with bull nose corners, go to www.sill-rite.com/premium_install.html.